### Honeywell

## Model 3129-121



## Tension/Compression Canister Load Cell

#### **DESCRIPTION**

The Model 3129-121 fatigue-resistant load cells are extremely resistant to extraneous bending and side loading forces. The structure virtually eliminates bending strains at the strain gage,

minimizing the primary cause of load cell failure. Dual bridge option available for feedback control and redundancy.

#### **FEATURES**

- Optional dual bridge (not shown)
- Metric threads (English threads availble: 3129-112)
- Resist fatigue failure
- Multi-beam structure design
- 1500000 N capacity
- Bending moment resistance of 840000 lb inches
- 65000 lb of shear resistance

### Model 3129-121

#### PERFORMANCE SPECIFICATIONS

Characteristic	Measure
Load range <sup>1</sup>	750000, 1000000, 1500000 N
Non-linearity	±0.2 % of rated output
Hysteresis	±0.2 % of rated output
Repeatability	±0.05 % of rated output
Output @ rated capacity	±2 mV/V (nominal)
Operation	Tension/compression
Resolution	Infinite
Standard calibration	Tension (+) and compression (-)

#### **ENVIRONMENTAL SPECIFICATIONS**

Characteristic	Measure
Temperature, operating	-54 °C to 93 °C [-65 °F to 200 °F]
Temperature, compensated	21 °C to 77 °C [70 °F to 170 °F]
Temperature effect, zero	±0.003 % of rated output/°F
Temperature effect, output	±0.003 % of reading/°F

#### **ELECTRICAL SPECIFICATIONS**

Characteristic	Measure
Strain gage type	Foil
Excitation (maximum)	20 Vdc or Vac RMS
Insulation resistance	> 5000 mOhm @ 50 Vdc
Bridge resistance (tolerance)	350 ohm
Number of bridges	1 or 2
Zero balance	±1.0 %
Electrical termination	MS-3102E-14S-5P


#### **MECHANICAL SPECIFICATIONS**

Characteristic	Measure
Static overload capacity	150 % of nominal capacity
Material	Carbon steel
Fatigue life (0 to full fatigue load)	100 x 10 <sup>6</sup> cycles
Fatigue life (full fatigue tension to compression)	50 x 10 <sup>6</sup> cycles
Natural frequency	See table

#### **WIRING CODES**

Wire	
Red	(+) excitation
Black	(-) excitation
Green	(+) output
White	(-) output

#### **TYPICAL SYSTEM DIAGRAM**

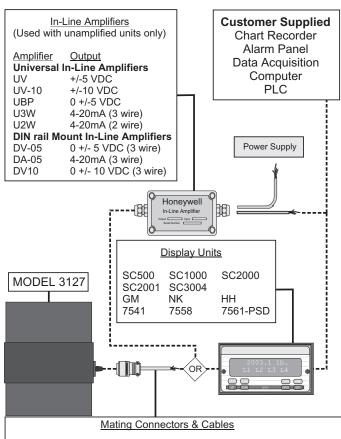

064-LW13621 Mating connector

7200-76-XX\* Mating connector and six conductor cable

(unamplified unit with sense leads but not shunt cal)

7200-75-XX\*\* Mating connector (MS - 5 pin) and four conductor cable

(unamplified sensor without sense leads)

7200-111-XX\*\* Mating connector (MS - 5 pin ) & 6 conductor cable

for connection to 7541

7200-110-XX\*\* Mating connector ( MS – 5 pin ) & 4 conductor cable

for connection to 7541

\* XX represents length in feet 100ft maximum \*\* XX represents length in feet 20ft maximum

## Tension/Compression Canister Load Cell

#### **NATURAL FREQUENCY**

Nominal load capacity F <sub>z</sub>	l limit			Static extraneous load limits				
lb	N	Static overload capacity (% of nominal capacity)	Fatigue capacity (% of nominal capacity)	Shear F <sub>x</sub> or F <sub>y</sub> (lb)	Bending M <sub>x</sub> or M <sub>y</sub> (lb-in)	Torque M <sub>z</sub> (lb-in)	Deflection at nominal load limit (in)	Ringing frequency (Hz)
150K	750K	150	75	40K	625K	150K	0.004	3000
200K	1M	150	75	55K	730K	260K	0.004	3400
300K	1.5M	150	75	65K	840K	236K	0.004	4100


#### **MOUNTING DIMENSIONS**

Model	A cm [in]	B cm [in]	C cm [in]	D cm [in]	E cm [in]	F cm [in]
3129	25,4 [10]	17,78 [7]	3,81 [1.50]	10,8 [4.25]	19,05 [7.50]	12,70 [5]

G cm [in]	H cm [in]	J cm [in]	K cm [in]	L cm [in]	*M cm [in]	*N cm [in]
6,35 [2.50]	12,7 [5]	3,81 [1.50]	13,97 [5.50]	8,41 [3.31]	M27-2 [1-8]	M76-2 [3-12]

<sup>\* 3129-121 •</sup> M and N are metric thread measures

<sup>\* 3129-112</sup> standard • M and N are English thread measures

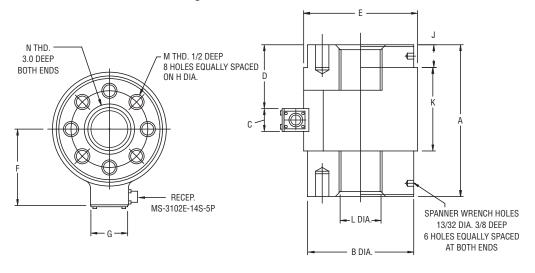

### Model 3129-121

#### **NOTES**

1. This unit calibrated to Imperial (non-Metric) units.

### Tension/Compression Canister Load Cell

Warranty. Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. The foregoing is buyer's sole remedy and is in lieu of all warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

For more information about Sensing and Control products, visit www.honeywell.com/sensing or call +1-815-235-6847 Email inquiries to info.sc@honeywell.com



• DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

# WARNING MISUSE OF DOCUMENTATION

- The information presented in this catalogue is for reference only. DO NOT USE this document as product installation information.
- Complete installation, operation and maintenance information is provided in the instructions supplied with each product.

Failure to comply with these instructions could result in death or serious injury.

Sensing and Control
Automation and Control Solutions
Honeywell
1985 Douglas Drive North
Golden Valley, MN 55422 USA
+1-815-235-6847

Honeywell